 
 


## Product information

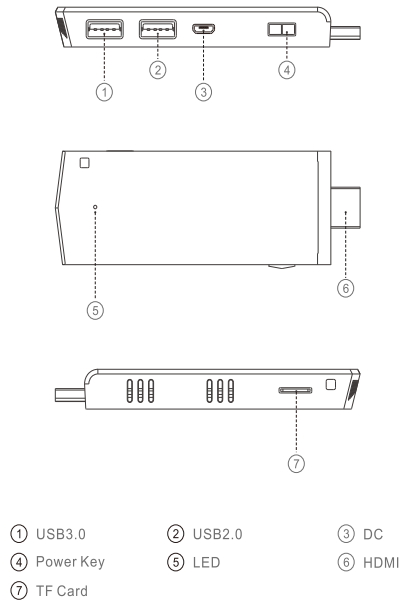

1

## Connecting

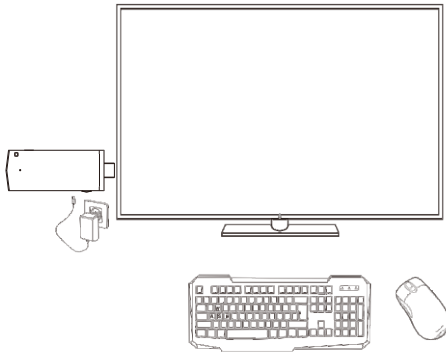 


2

- ❖ Turn on a TV or monitor and change the video output to be HD.
- ❖ Connect the Pocket PC to the HD port of a TV or monitor.
- ❖ Connect the power adapter to a power socket, and the other end to the DC port of the Pocket PC.
- ❖ Then the device starts and LED light turns on.

## Power ON

Press the "Power" button for 3 seconds, and the LED light turns blue. After 30-40 seconds, you will see the screen of Windows 10.

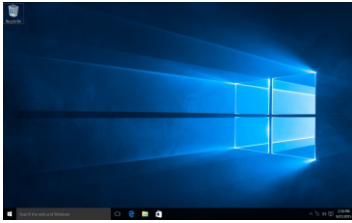


### Power OFF

If you want to shut down the unit, please do not unplug the power adapter directly. Just shut it down in a traditional PC's way.

## Enter BIOS

 When "Power ON" and start this mini PC, press the "Esc" button for 10 seconds to enter BIOS.

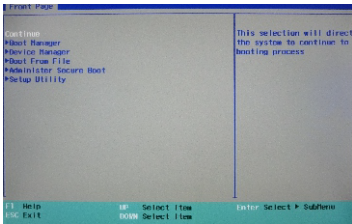

3

## Wifi

When Pocket PC starts, you can connect it to Internet via Wifi:

1. Select Wifi.
2. Select your network.
3. Input Wifi password.

Once you are connected to the network, wait a moment for your IP address to be assigned. Open a web browser and try to connect to a website.

 
## Bluetooth

To connect to a Bluetooth device:

1. From the homepage, click on Settings, then on Other, then on More settings, then Bluetooth, and turn Bluetooth ON.
2. Click "Not visible to other Bluetooth devices". The menu will turn to "Visible to all nearby Bluetooth devices", and a 2-minute countdown will begin.
3. Select the target device within 2 minutes and it will be connected automatically. Some devices require a pairing code (usually 0000 or 1234).

4


# Quick Start Guide Nugens Mini PC

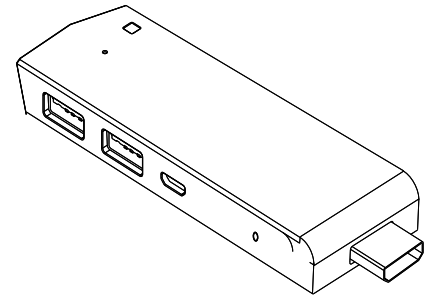

Inspire Next-Gen  
**Nugens**  
www.NugensTech.com

## Use the MicroSD Card port

 
pocket PC supports TF card size up to 128 GB.

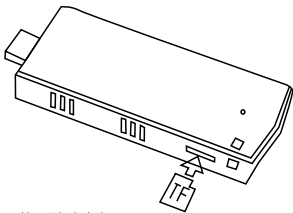

Note: TF card is not included.

## Pocket PC

 Install a security cable loop in the security opening on the edge of Pocket PC. The security opening is 3 mm x 3 mm.

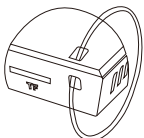


Note: Security cable loop is not included. You can build one using a length of quality wire rope that is less than 3 mm. Insert the rope through the security opening and then crimp the ends together with a cable sleeve.

5


## USB

 Plug U disk in the USB port for high speed data transfer.

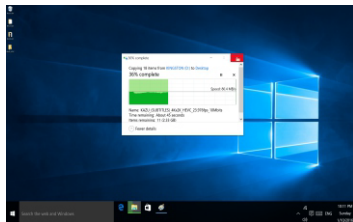

## VIDEO

 Connect this Pocket PC to a TV or monitor to enjoy HD video.

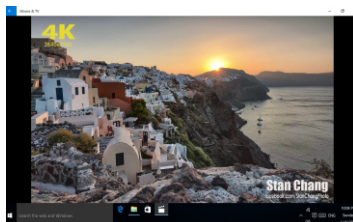

6

## Others

### Windows Update

In the Windows Update section, you'll find (almost) everything you need to update Windows 10. At the top of the screen, you'll see a status message that tells you whether your computer is up to date, and when it last checked for updates. For more update options, click Advanced options.

### Windows Defender

Windows Defender also has a place in the Update & security tab (though it hasn't been banished from the Control Panel like Windows Update has). In this section, you can turn on different Windows Defender options, including real-time protection, cloud-based protection, and automatic sample submission.

### Windows Backup

In the Backup section you can set your backup settings: Add an external drive for backup, or click More options to see Advanced settings (this will take you to the File History window in the Control Panel).

### Recovery

The Recovery section offers three options to help you fix your computer. Reset this PC, which will let you reinstall Windows without removing your files; Go back to an earlier build, which will let you go back to an earlier build of Windows (this will let you uninstall updates -- you can only go back to a previous version of Windows within the first month of upgrading); and Advanced startup, which restarts your PC so you can restore Windows from a system image, USB drive or disc.

### Activation

You can now activate Windows 10 using a Windows 7, 8 or 8.1 product key, which means you can do a clean installation of Windows 10 and still receive the free upgrade promised to older Windows users. To activate your copy of Windows 10, go to the Activation section and click Change product key, or click Go to Store if you'd like to purchase a different edition of Windows.

### For developers

The For developers section is designed for developers -- people making apps and programs for Windows 10. That doesn't mean you won't use it, however. If you want to sideload apps, for example, you'll need to go into this section to turn that feature on.

7

## Start the Device the First Time

 
The first time you start the device, Windows 10 guides you through the following steps:

- ❖ Select your region and language.
- ❖ Accept the Windows license terms.
- ❖ Personalize Windows and assign a PC Name.
- ❖ "Get Online" dialog to pick a wireless network (this step is optional).
- ❖ Choose Express Settings or Customize.
- ❖ Assign a user name and password.
- ❖ Finished.


## Package Content




Pocket PC\*1Pcs



HDMI Cable\*1Pcs

 

Power Adapter\*1Pcs

 

User Manual\*1Pcs

8

## Specification

### Hardware Specifications:

Chipset	Intel Z8350 4-Core 1.44GHz(Up to 1.92GHz)
GPU	Intel HD Graphics
RAM	2GB DDR3L / 4GB DDR3L
ROM	32GB EMMC / 64GB EMMC

### Power Supply Specifications:

Power Supply	DC 5V 3A
Power Indicator (LED)	Power ON: blue

### Main Features:

OS	Windows 10
3D	Hardware 3D graphics acceleration
Support Decoder format	HEVC (H.265 @ 4Kx2K), H.264 @5.1, SVC, VP8 1080p, VP8 4K, VP8 stereo, MPEG4 ASP/SP, AVS, BD2.4, H.263
Support Media format	H.264@ 5.1, VP8 1080p, VP8 4K, VP8 stereo, SVC, AVS, H.263
Support Music format	MP3, AAC, AC3/DD+, WMA9, PCM (WAV)
Support Photo format	HD JPEG/BMP/GIF/PNG/TIFF
USB host	1High speed USB 3.0, 1High speed USB 2.0
Card reader	TF Card
OSD type of languages	English
WiFi	AP6255 Support IEEE 802.11 a/b/g/n RT8723BS Support IEEE 802.11 b/g/n
Bluetooth	Bluetooth V4.0
Mouse/ Keyboard	Support mouse and keyboard via USB; Support 2.4GHz wireless mouse and keyboard via 2.4GHz USB dongle
HD	Support 4K x 2K
Power KEY	Support Power KEY



9